

Spracht Limited Warranty Policy

All information is believed to be reliable, however specifications are subject to change without notice.

Spracht warrants its products against defects or malfunctions in material and workmanship under normal use and service, with the exceptions stated below. This warranty lasts for one year from the original date of purchase. Coverage terminates if you sell or otherwise transfer the product. In order to keep this warranty in effect, the product must have been handled and used as prescribed in the instructions accompanying the product.

Spracht shall (at its option) repair or replace a defective unit covered by this warranty, or shall refund the product purchase price. Repair, replacement with a new or reconditioned unit, or refund, as provided under this warranty, is your exclusive remedy. This warranty does not cover any damages due to accident, misuse, abuse, or negligence. Spracht shall not be liable for any incidental or consequential damages. Some states do not allow limitation or exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Implied warranties of merchantability and fitness for a particular purpose are limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. To make a warranty claim, the purchaser must obtain a return authorization number (RA) from Spracht, and then return the product to Spracht at purchaser's expense. A copy of the original dated receipt or shipping document must accompany the product. To obtain a return authorization, see "Warranty" on our website at www.spracht.com, send an e-mail to info@spracht.com, or contact us at:

Spracht

2672 Bayshore Parkway, Bldg 900

Mountain View, CA 94043 USA

Tel: +1 650-215-7500

Fax: +1 650-318-8060

For repair or replacement of a failed product, allow 4 to 6 weeks for processing and shipment.

Other Optional Accessories

External Microphone

CP-2016-007

sold as a pair



Digital Adapter Module

CP-2016-003

Plugs into the Aura SoHo™

Conference Phone Accessory Bay,
so you can connect to your office
digital PBX phone system.



All Accessories are available from our website: www.spracht.com

Bluetooth® Adapter Module
for **AURA SoHo™**
Conference Phone
CP-2016-004

The Bluetooth® adapter Module is designed to allow the Aura SoHo™ Conference Phone to pair with your mobile phone for conferencing . You can still continue to make analog phone calls, as usual, without having to remove the module.



Installation Guide

1. Turn OFF the Aura SoHo™ Conference Phone before changing Modules.
2. Unplug the wall adapter AC power cable.
3. On the under side of the Aura SoHo™ Conference Phone, if your Analog Module has a lock screw, remove it.



Analog Module



4. Pull out the Analog Module.



5. Install the Bluetooth® Module.



6. If you removed a lock screw to take out the Analog Module, use it now to secure the Bluetooth® module.




6. Turn the Bluetooth® Module ON/OFF switch to the ON position.



7. Turn the Aura SoHo™ Conference Phone right side up. Reconnect the AC power cable. Turn ON the Aura SoHo™ Conference Phone. After a couple of seconds, 3 special tones will be heard. The Aura SoHo™ Conference Phone is installed correctly and ready for Bluetooth® pairing.

Bluetooth® Pairing

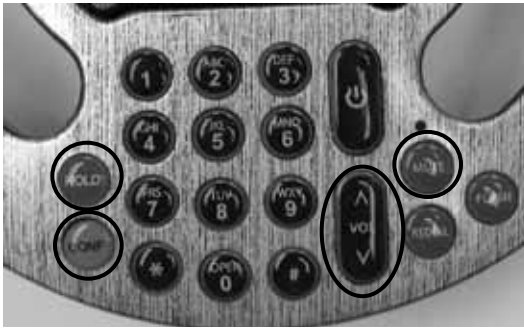

In Bluetooth® Mode, only the circled buttons are active.
The Keypad Functions are:
CONF - Activates Bluetooth® functionality.
HOLD - Turns the input and output sound ON and OFF .
MUTE - Turns the Mic ON and OFF.
VOL - Up and Down- Speaker Volume Control.

Bluetooth® Pairing Procedure

8. Press and hold the CONF button for a couple of seconds, until both the Amber and Blue LEDs are flashing. Release the CONF button. The Aura SoHo™ Conference Phone is ready for pairing.
9. On your cell phone, navigate to the "Discover Device" function. Your cell phone will find "BTHS".
10. Select BTHS. Your cell phone will ask for a pin number. Enter 0000. If your cell phone requires a response from the Aura SoHo™ Conference Phone, press the CONF button.
11. Your cell phone is now paired to the Aura SoHo™ Conference Phone. The next time you want to make a call using your cell phone, it will automatically pair: you will not need to pair again.

Note: If the pairing time limit has been reached, and your cell phone hasn't found the Aura SoHo™ Conference Phone, restart the pairing mode from Step 8.

The Aura SoHo™ Conference Phone will stay in pairing mode for 60 seconds. If pairing has not been established in that time, the Aura SoHo™ Conference Phone will go into power saving mode. Re-power and start again at Step 3.

To Enable and Disable the Bluetooth® function

Once the Bluetooth® Adapter Module is installed, there is no need to remove it from the Accessory Bay, even if it's not in use.

To Disable the Bluetooth® function: Unplug the AC power and switch the Bluetooth® Adapter Module ON/OFF switch to the OFF position. Power the Aura SoHo™ Conference Phone back on, wait for the 2 sound tones, and the unit will be in land line mode.

To Re-Enable the Bluetooth® function: Unplug the AC power and switch the Bluetooth® Adapter Module ON/OFF switch to the ON position. Replug the AC power. When you power the Aura SoHo™ Conference Phone back ON, and wait for the 3 sound tones, the unit will be at the connection step, waiting for pairing.

Bluetooth® Module Auto Pairing function

For most Mobile phones, once the Aura SoHo™ Conference Phone has been paired, as long as the Bluetooth® Adapter Module is on, it will not be necessary to re-pair your previously paired cell phone. But if your mobile phone does not automatically re-pair, simply follow the pairing instructions from Step 8.

Voice Activation feature

If your cell phone has a voice activation function, press the CONF button on the Aura SoHo™ Conference Phone, then speak. The cell phone will receive your voice commands.

