









# Quick Start Guide

Connecting to Bluetooth® phones


1. Press  to turn on your Aura Mobile BT™ (AMBT™).
2. Turn on your mobile phone.
3. Press and hold  until a chime sounds. Release .
4. Press and hold  on your AMBT™. **DO NOT** release  until you hear a two note chime. The Bluetooth® light will flash **BOTH** blue and amber. The AMBT™ is now ready for pairing.
5. Navigate to your Bluetooth® menu on your mobile phone to pair to your AMBT™. (You may need to refer to your mobile phone's user manual for pairing instructions.)
6. Use your mobile phone's Bluetooth® menu to "Discover" the AMBT™, listed as "BTHS".
7. Press "OK" if it prompts you to confirm.
8. For PIN or code, enter: **0000**, then press "OK" to pair.
9. To make a call, dial the number on your mobile phone's keypad and press "Call".
10. To answer a call, press  on your AMBT™ or "Call" on your mobile phone when you hear ringing.
11. To end a call, press  on your AMBT™ or "End" on your mobile phone.

*Note: The AMBT will remain paired to your mobile phone until either one of these devices is powered off.*

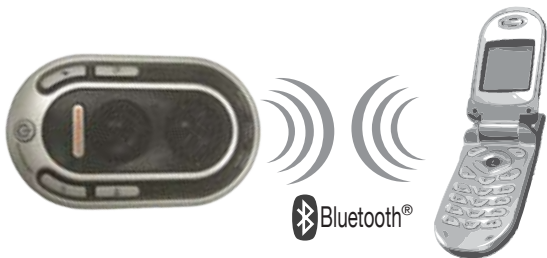




# Quick Start Guide


## Connecting to computers for VoIP calls

1. Press and hold  on your Aura Mobile BT™ (AMBT™) until a chime sounds and the "Status" light flashes green.
2. Take the VoIP cable and connect the green headphone plug into the headphone jack (typically green) on your computer.
3. Connect the pink microphone plug into the microphone jack (typically pink) on your computer.
4. Connect the black plug into the "Line" jack on your AMBT™.
5. Launch your computer's VoIP application to make a call.

## Connecting to cordless and desktop phones (with headset jacks)

1. Press and hold  on your Aura Mobile BT™ (AMBT™) until a chime sounds and the "Status" light flashes green.
2. Connect one end of the cordless phone cable into the "Line" jack on your AMBT™.
3. Connect the other end of the cable to the headset jack on your cordless phone.
4. If you hear feedback or echoing from the AMBT™, you must switch to the alternate acoustic setting. To do so, press and hold  and  at the same time. **DO NOT** release until the "Status" light flashes rapidly.
5. The AMBT™ is now ready for use.

### End View of Aura Mobile BT™

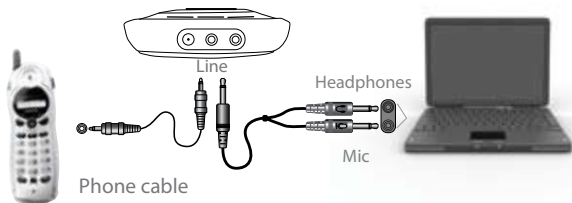

Headset jack connection  
cordless phone

OR

Computer connection  
VoIP speakerphone